

SY-715 Setup Instructions

**Please have the following information regarding your network ready: Subnet Mask, IP Address, & Gateway Address

- 1) Press **[1]** and **[2]** simultaneously six times.
- 2) The screen will display the version and date. Press **[Enter]**.
- 3) The screen will display: **ADJUST RTC (N/Y)**. By default '**N**' will be selected, press **[Enter]**. If '**N**' is not selected, press **[Out]** to scroll through the options. Once '**N**' is selected, press **[Enter]**.
- 4) The screen will display: **BAUDRATE: 19200**. By default '**19200**' should be selected, press **[Enter]**. If '**19200**' is not selected, press **[Out]** to scroll through the options. Once '**19200**' is selected, press **[Enter]**.
- 5) The screen will display: **STATION ID: 00**. By default '**00**' should be selected, press **[Enter]**. If '**00**' is not selected, press **[Out]** to scroll through the options. Once '**00**' is selected, press **[Enter]**.
- 6) The screen will display: **MODERN RINGS: N**. By default '**N**' should be selected, press **[Enter]**. If '**N**' is not selected, press **[Out]** to scroll through the options. Once '**N**' is selected, press **[Enter]**.
- 7) The screen will display: **NETWORK (N/A/B): B**. By default '**B**' should be selected, press **[Enter]** twice. If '**B**' is not selected, press **[Out]** to scroll through the options. Once '**B**' is selected, press **[Enter]** twice.
- 8) The screen may display one of the following messages:
 - a. Display: **POLLING INTERVAL**: enter all zeros and press **[Enter]**.
 - b. Display: **POLLING (Y/N)**: By default '**N**' should be selected, press **[Enter]** twice. If '**N**' is not selected, press **[Out]** to scroll through the options. Once '**N**' is selected, press **[Enter]** twice.
- 9) The screen will display: **WAIT RELEASE...** If the steps were done correctly, the device will prompt you to "Press **[Enter]** key." If you get an error message, please repeat steps 1 - 8.
- 10) The screen will display: **MY IP ADDRESS:**, enter the IP Address that you wish to assign to this machine and press **[Enter]**.
- 11) The screen will display: **GATEWAY ADDRESS:**, enter your Gateway Address and press **[Enter]**.
- 12) The screen will display: **REMOTE ADDRESS:**, enter all zeros and press **[Enter]**.
- 13) The screen will display: **SUBNET MASK:**, enter your Subnet Mask and press **[Enter]**.
- 14) The screen will display: **MY PORT: 03734**. By default '**03734**' should be selected, press **[Enter]**. If '**03734**' is not selected, punch in the numbers and press **[Enter]**.
- 15) The screen will display: **HOST PORT:**, enter all zeros and press **[Enter]**.
- 16) The screen will display: **DISCONCT SEC: 5**. By default '**5**' should be selected, press **[Enter]**. If '**5**' is not selected, press **[5]** and press **[Enter]**.
- 17) The screen will display: **DHCP: N**. By default '**N**' should be selected, press **[Enter]**. If '**N**' is not selected, press **[Out]** to scroll through the options. Once '**N**' is selected, press **[Enter]**.
- 18) The screen will display: **WAIT RELEASE...** The device will prompt you to "Press **[Enter]** key."
- 19) The screen will display: **USER FIELD: 0000**. By default '**0000**' should be selected, press **[Enter]**. If '**0000**' is not selected, punch in the numbers and press **[Enter]**.
- 20) The screen will go back to its default screen, displaying the version and date. The process has been completed.

Note: SY-715 has two network ports on the bottom. The middle port (one without the lights) should be used when connecting device to the network.